

PRODUCED WATER



30 BBL

UTAH GAS OP LTD  
DOUGLAS CREEK UNIT #38  
NE/NW, SEC. 5, T3S, R101W  
FED LEASE : COD-34909  
API #05-103-09316  
RIO BLANCO CO., COLORADO  
NEAREST PUBLIC ROAD: CO-139  
"LAT. 39.820907 LONG. -108.756711"  
EMERGENCY PH: #1-970-693-6021  
LOCAL 911

Utah Gas Cor

*natural gas*

LOADING AND UNLOADING INSTRUCTIONS

1. Vehicle Operator shall supervise loading or unloading AT ALL TIMES. Drivers are not permitted to remain in the vehicle during loading or unloading.
2. Use appropriate PPE.
3. Observe windsock if present.
4. Park vehicle upwind, if possible.
5. Set brakes.
6. Shut off all electrical systems.
7. Hook up ground cable.
8. Connect loading hose.
9. Load or unload vehicle.
10. Close all valve caps, disconnect hoses, and safely manage any remaining liquids.
11. Replace all valve caps after pumping is finished make sure all connections are isolated and capped.
12. Disconnect ground cable and safety exit.

SPECIAL NOTICE

Report all spills, leaks, safety hazards, or malfunctions immediately.

970-693-6021

NO SMOKING OR OPEN FLAMES