

30 BBL

PRODUCED WATER

WARNING



Utah Gas Corp.

natural gas

LOADING AND UNLOADING INSTRUCTIONS

1. Vehicle Operator shall supervise loading or unloading AT ALL TIMES. Drivers are not permitted to remain in the vehicle during loading or unloading.
2. Use appropriate PPE.
3. Observe windsock if present.
4. Park vehicle upwind, if possible.
5. Set brakes.
6. Shut off all electrical systems.
7. Hook up ground cable.
8. Connect loading hose.
9. Load or unload vehicle.
10. Close all valve caps, disconnect hoses, and safely manage any remaining liquids.
11. Replace all valve caps after pumping is finished and make sure all connections are isolated and capped.
12. Disconnect ground cable and safety cut.

SPILL NOTICE

- Report all spills, leaks, safety hazards, or malfunctions immediately.

970-693-6021

HAZARDOUS MATERIALS

UTAH GAS OP LTD
DRAGON TRAIL UNIT #1301
NW/NW, SEC. 19, T2S, R102W
FED LEASE: COC-02865
API: 05-103-05153
RIO BLANCO CO., COLORADO
NEAREST PUBLIC ROAD: CR-116
LAT. 39.864373 LONG. -108.894217
EMERGENCY PH. #1-970-693-6021
LOCAL 911