

LEGEND:

- = SURFACE LOCATION.
- ◆ = ENTRY POINT.
- = BOTTOM HOLE LOCATION.
- ▲ = SECTION CORNERS LOCATED. (NAD 83)
- △ = SECTION CORNERS RE-ESTABLISHED.
(Not Set on Ground.)
(NAD 83)

NOTE:
Distances referenced
on plat to section lines
are perpendicular.

