

200 ft



Legend

- Areas potentially needed for production operations (Location and interim Rec. for production trucks, support equipment, APC - Thermawest Group, metal shavings, light, etc.)
- Areas immediately around reset (caution! use hard cover, prime walls, production trucks, support equipment, APC - Thermawest Group, metal shavings, light, etc.)
- 20' Drive Lane Around Work Area
- APCA Necessary to support workover 216 (230' x 130' w/ 20' Drive Lane)
- SAFE Areas for Trucks entering/exiting location
- Interim Production and other final "Production Area"
- * Requires the establishment of interim workover area.


~1.0 acre Production Area

Falcon Seaboard 11-90-12 #1A

Falcon Seaboard 11-90-12 #1

Falcon Seaboard 11-90-12 #1A

~2.50 acres Interim Rec

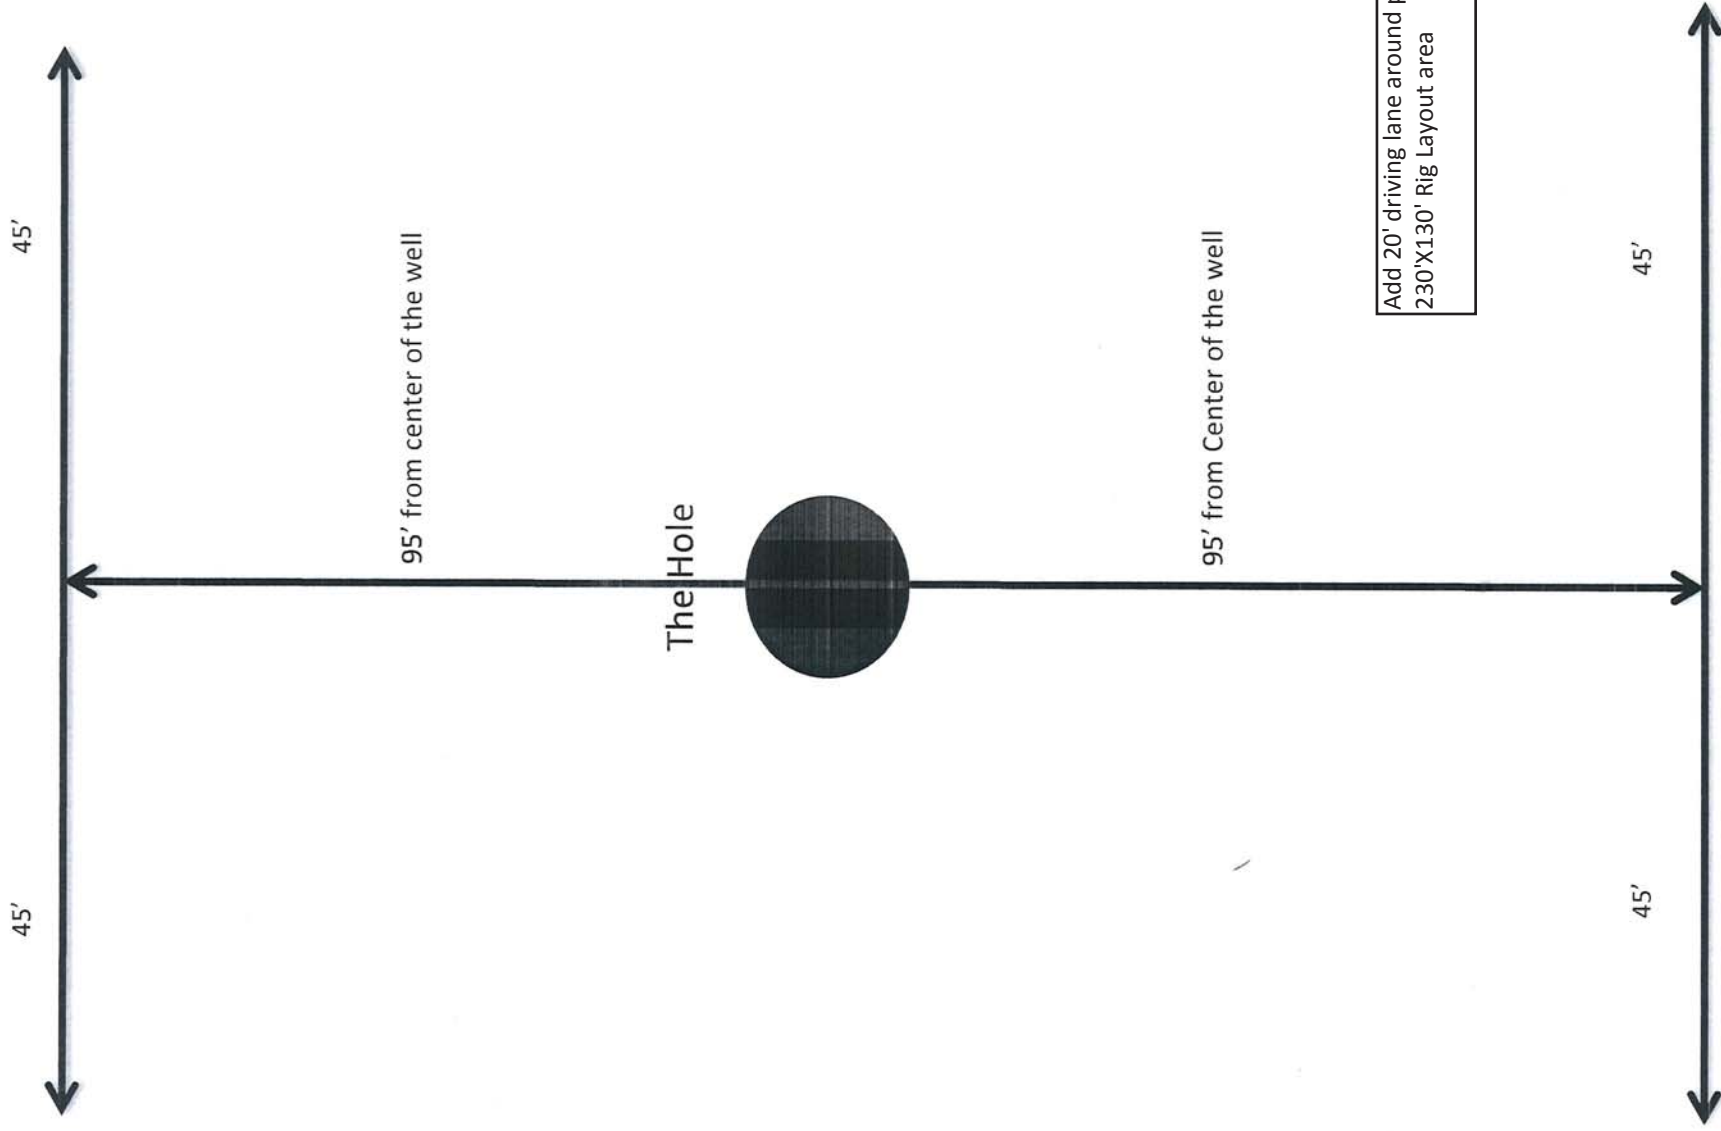

Add 20' driving lane around perimeter for a
230'X130' Rig Layout area